



Boosted Board 1st Generation Rear Wheels Replacement

How to take off and replace the rear wheels on your Boosted Board 1st Generation.

Written By: Emily Imfeld



INTRODUCTION


This guide will help teach you how to take off the rear wheels of your Boosted Board.



TOOLS:

- [1/2" Socket Wrench](#) (1)
 - [9/64" Allen Wrench](#) (1)
-

Step 1 — Rear Wheels

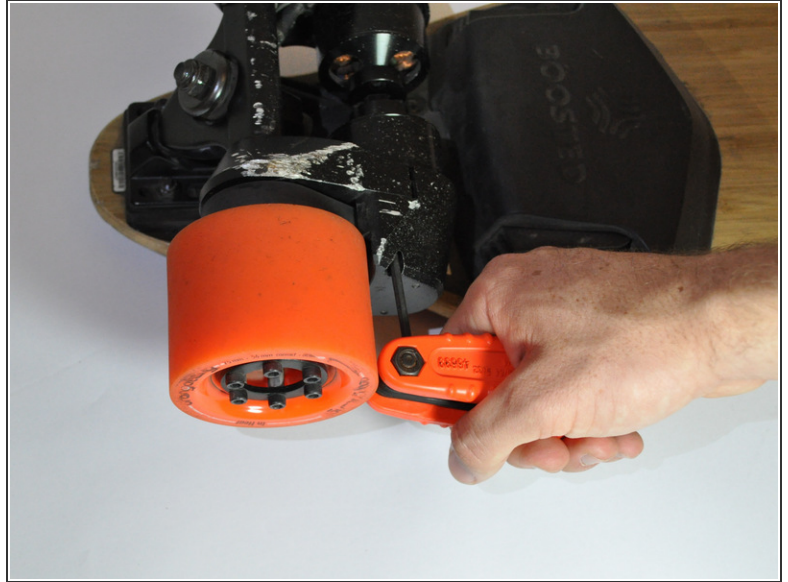

- Loosen the two 16.74 mm motor mount hex nut screws with a 9/64" Allen wrench.

i Do Not Remove the Screws.

Step 2



- Compress the motor mount back towards the wheel.
- While keeping the motor mount compressed, tighten one of the hex nuts that you loosened in the previous step.


i The motor mounts are spring tensioned so it is necessary compress them to loosen the belts.

Step 3



- Remove the axle nut with a 1/2" socket wrench

Step 4

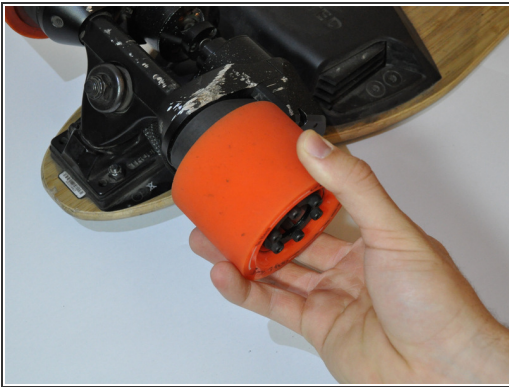

- Rotate and pull counterclockwise until the wheel comes off the axle completely.
- i* The **front** washer will come off with the wheel.
- Remove the **back** washer from the axle.
- i* Replacing the wheel requires the bearings to be switched into the new wheel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:55:59 AM.